

(CZ) NÁVOD NA MONTÁŽ
 (DE) MONTAGEANLEITUNG
 (PL) INSTRUKCJA MONTAŻU
 (RU) ИНСТРУКЦИЯ МОНТАЖА


(GB) INSTALLATION INSTRUCTIONS
 (HU) ÖSSZESZERELÉSI ÚTMUTATÓ
 (SK) NÁVOD PRE MONTÁŽ
 (UA) ІНСТРУКЦІЯ З МОНТАЖУ

RAVAK®


X00000... BÍLÁ L/R

X00000... DUB L/R

X00000... OŘECH L/R

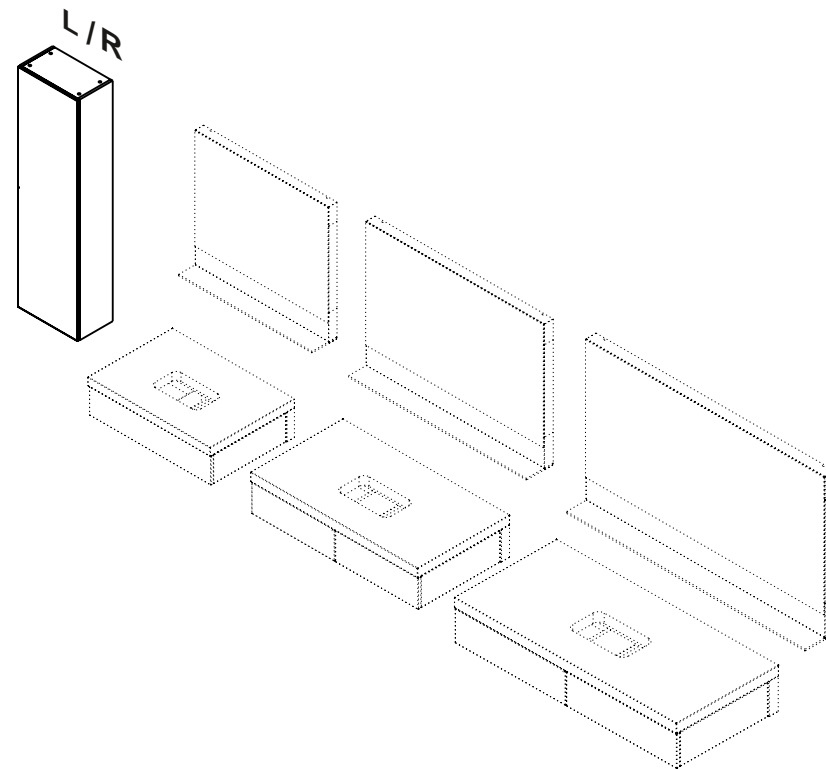

(CZ) POSTRANNÍ SKŘÍŇKA VYSOKÁ	NÁVOD NA MONTÁŽ
(DE) HOCHSCHRANK	MONTAGEANLEITUNG
(HU) OLDALSÓ SZEKRÉNY, MAGAS	ÖSSZESZERELÉSI ÚTMUTATÓ
(GB) SIDE CABINET, TALL	INSTALLATION INSTRUCTION
(PL) SZAFKA BOCZNA WYSOKA	INSTRUKCJA MONTAŻU
(RU) ВЫСОКИЙ БОКОВОЙ ШКАФЧИК	ИНСТРУКЦИЯ МОНТАЖА
(SK) POSTRANNÁ SKRINKA VYSOKÁ	NÁVOD PRE MONTÁŽ
(UA) ШАФКА БОКОВА ВИСОКА	ІНСТРУКЦІЯ З МОНТАЖУ

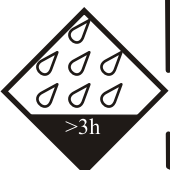


5

CZ/SK let záruky
 DE jahre garantie
 GB years of guarantee
 HU év garancia
 PL lat gwarancji
 RUS лет гарантии
 UA рокив гарантії


L / R







1900

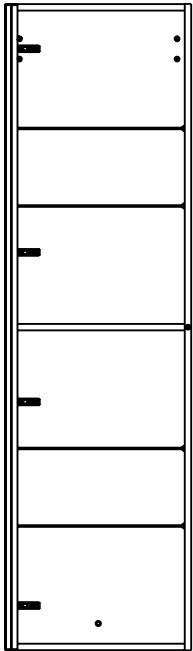


Ø10


Ø8

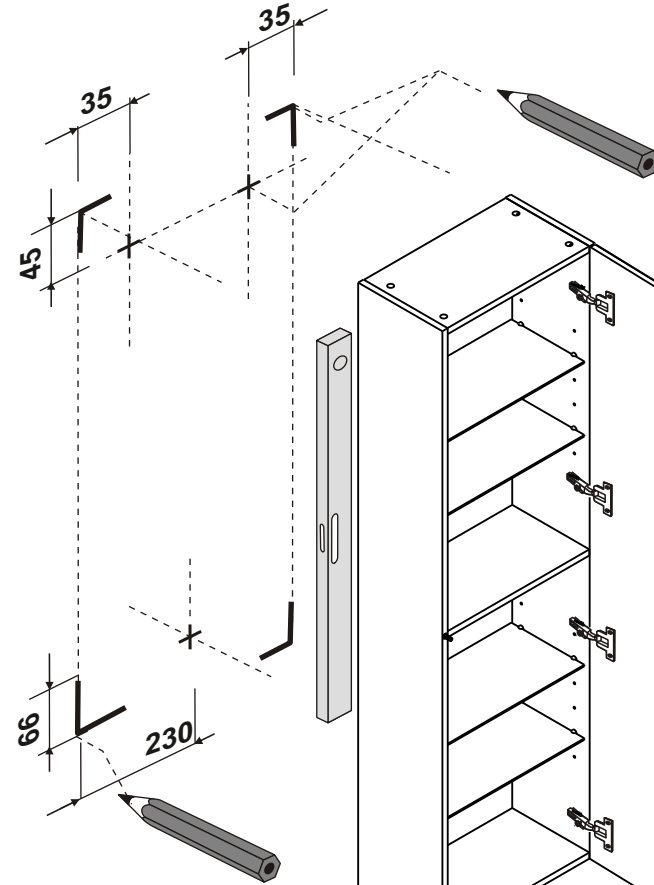

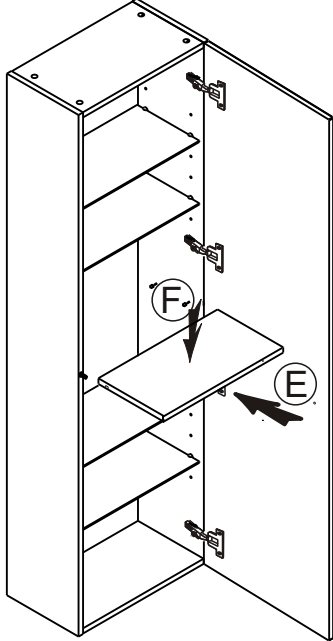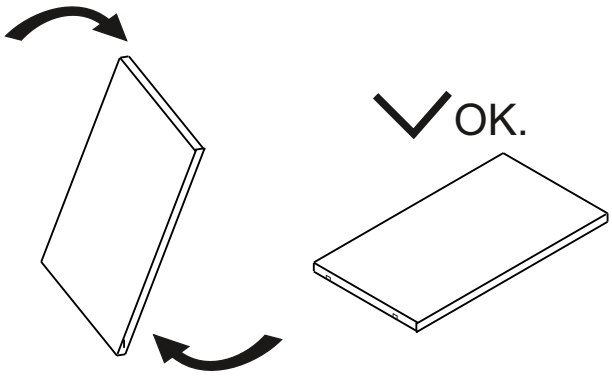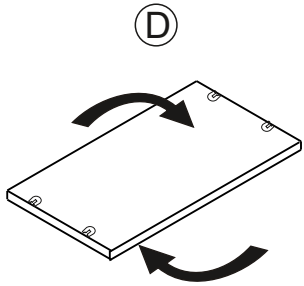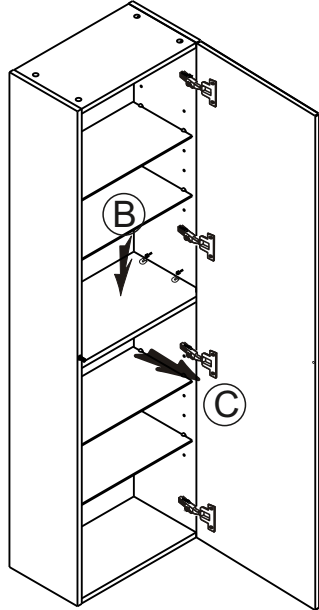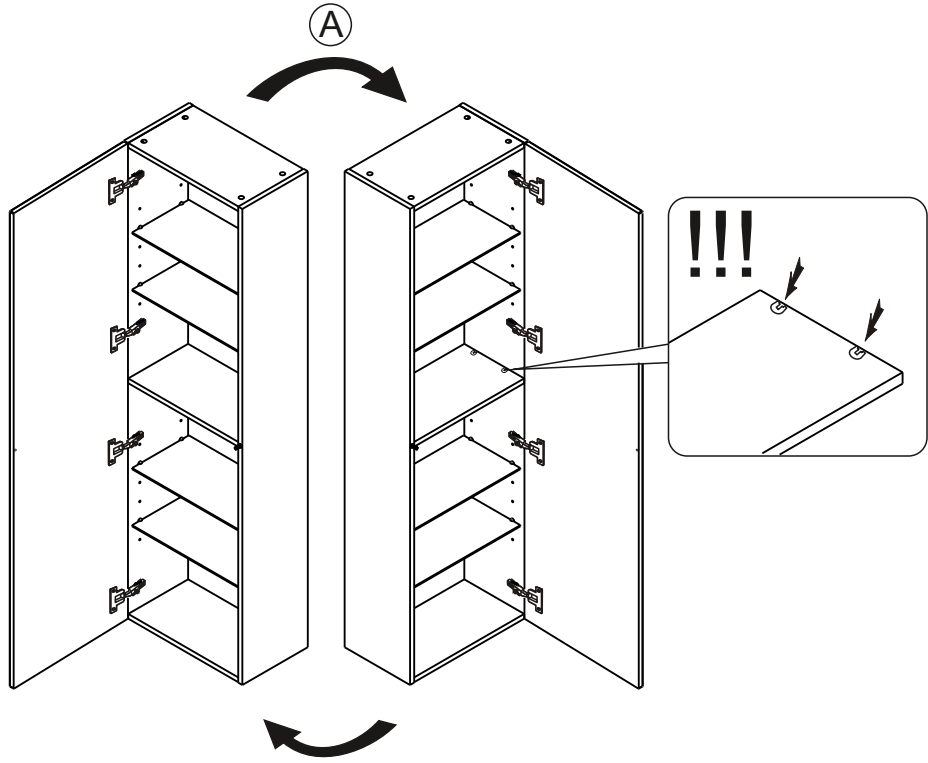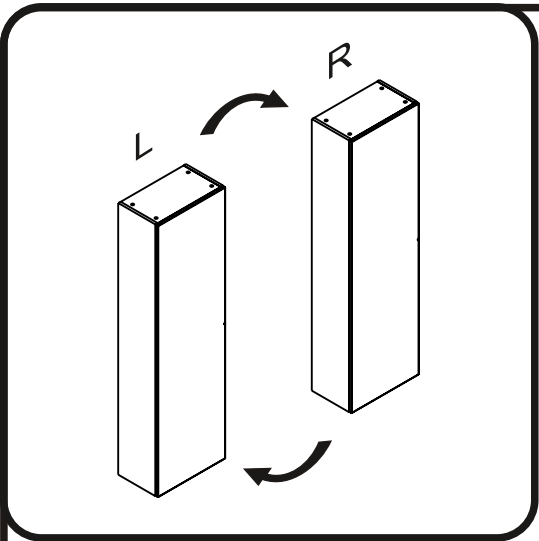

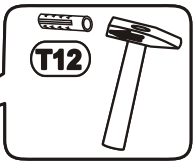

Ø 10

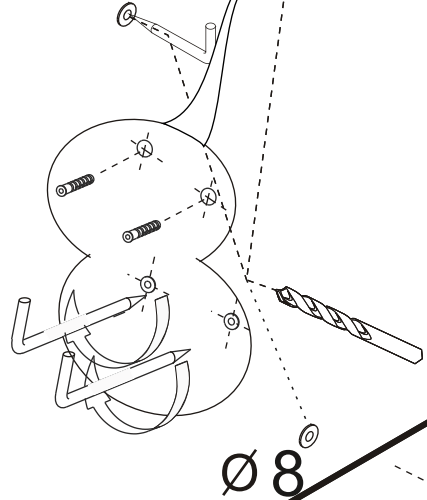

Ø 8

