


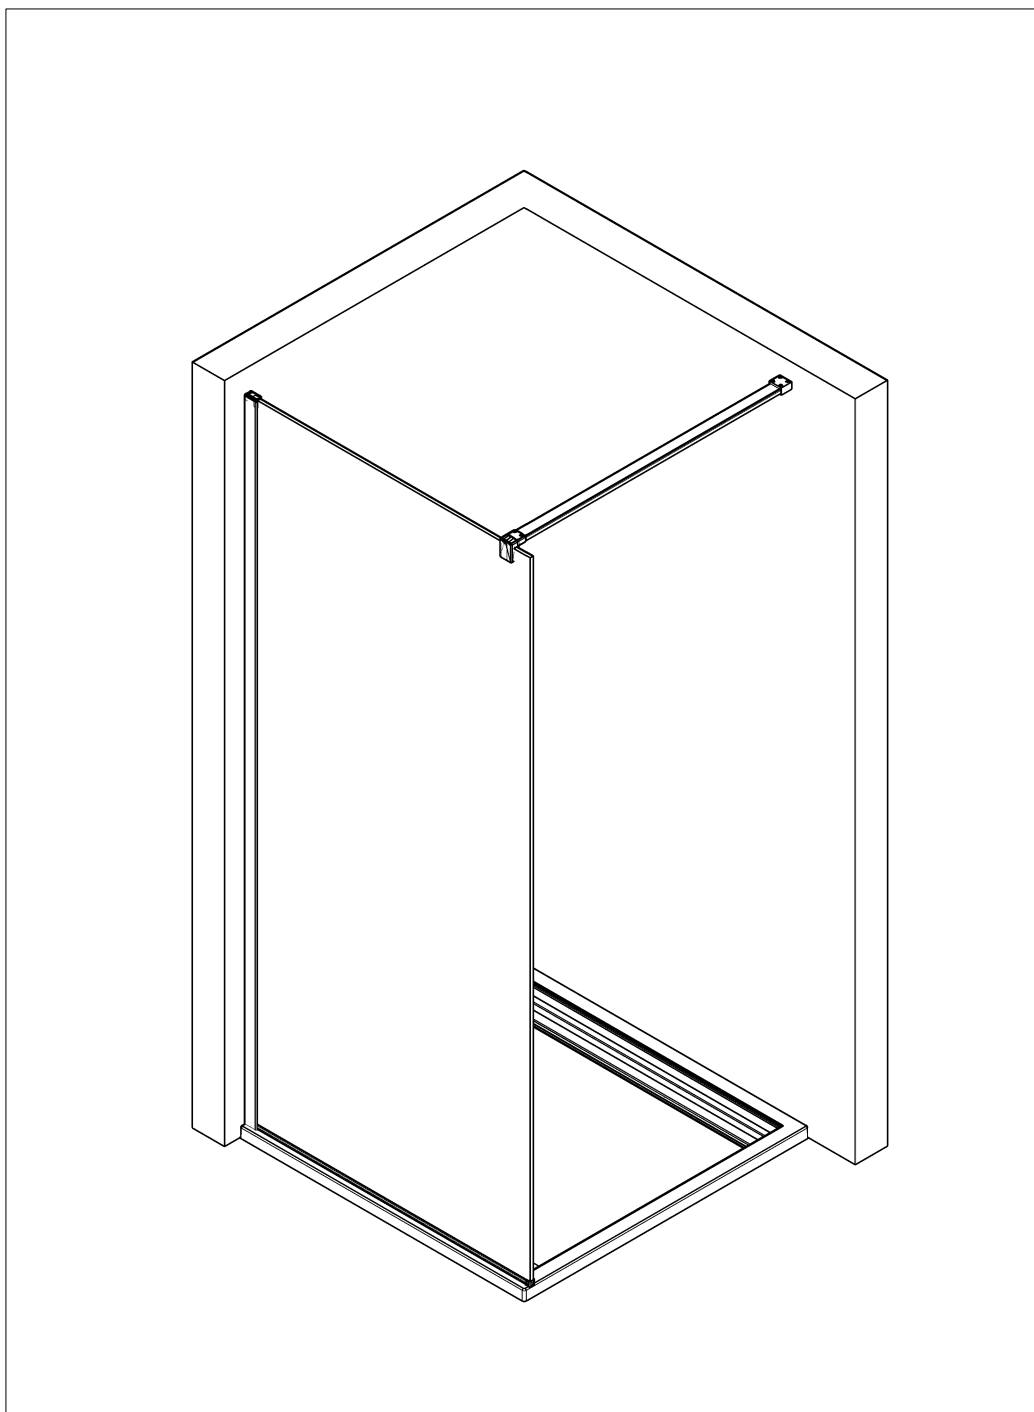



# 19453

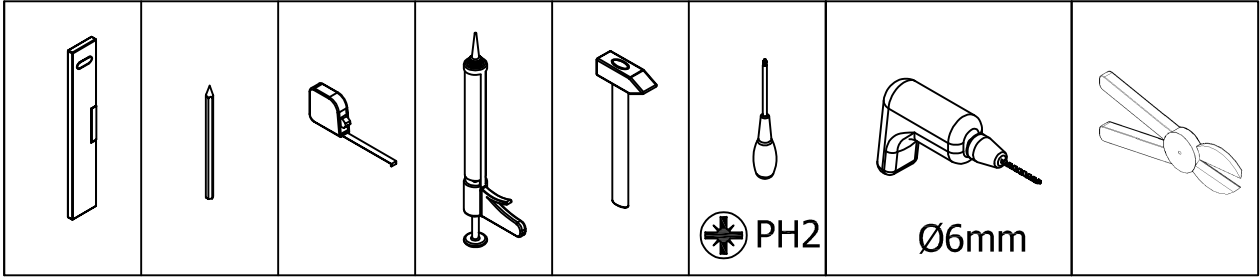

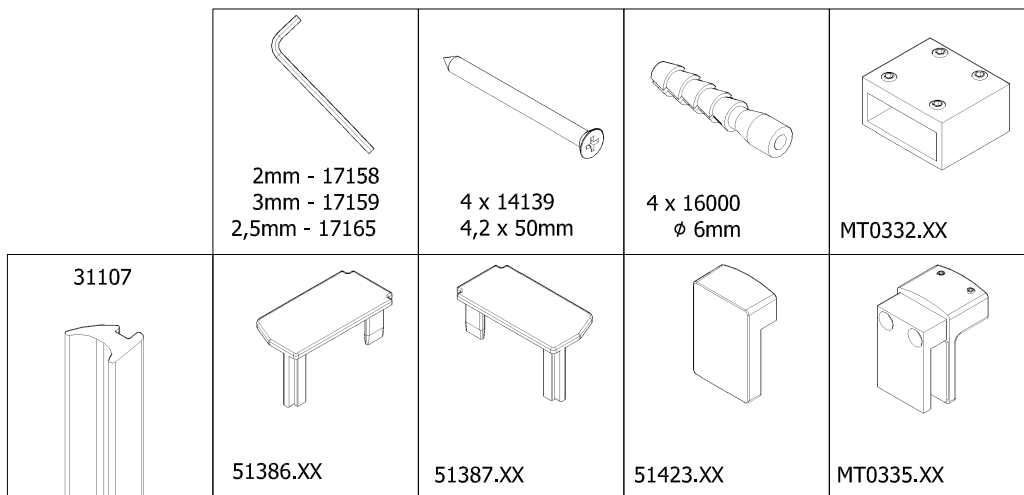

1x

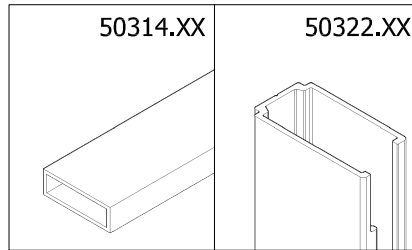


Aufmerksamkeit auf Einbaulage  
Warning fitting position  
Attention position de pose  
Pozor na pozici pantů


Uwaga - miejsce montaży  
Pozor na ułożenie pánov  
Blootstellingspositie van de aandacht  
Uppmärksamhet på installationsposition

Atenție la poziția de instalare  
Opmærksomhed på installationsposition  
Увага до положення установки  
Oppmerksomhet på installasjonsposisjon



STR4P  
STR4P + BTE

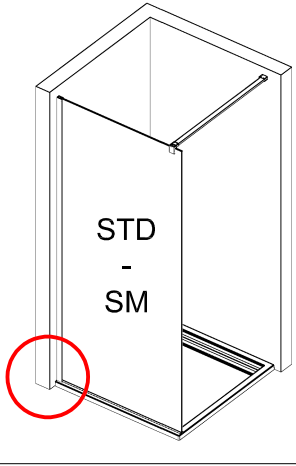


WPE

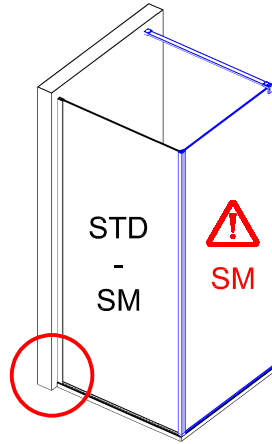


WPE + BTE

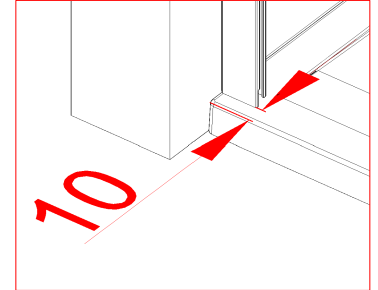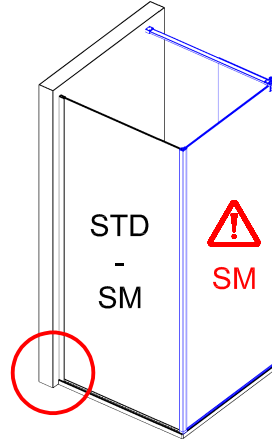



STR4P  
STR4P + BTE

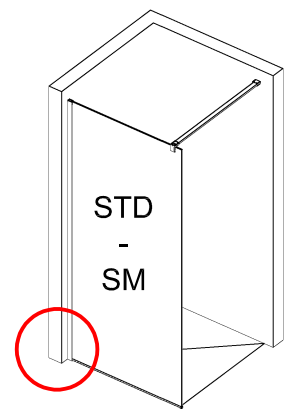



WPE

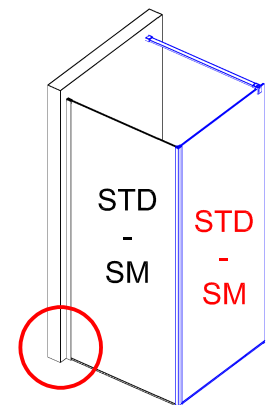



WPE + BTE







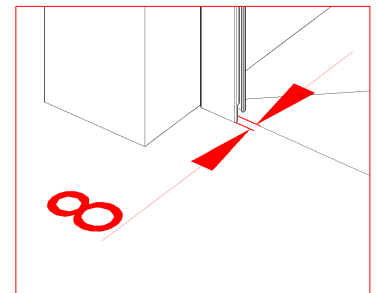
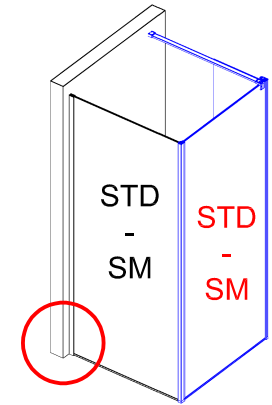











WPE







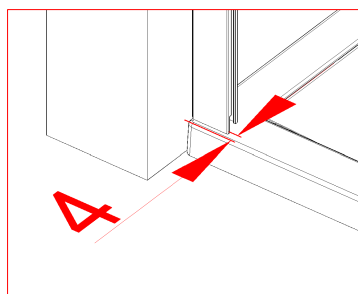
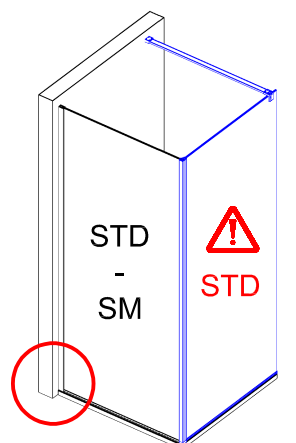


WPE + BTE




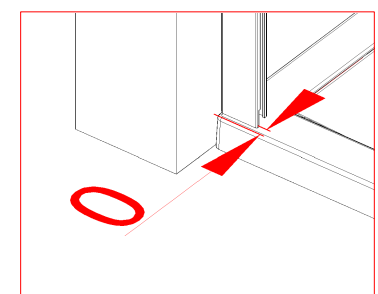
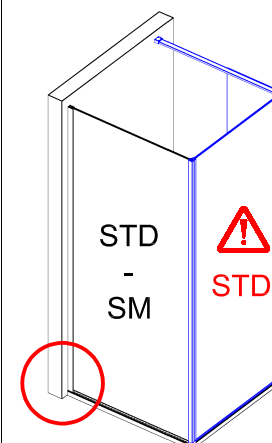


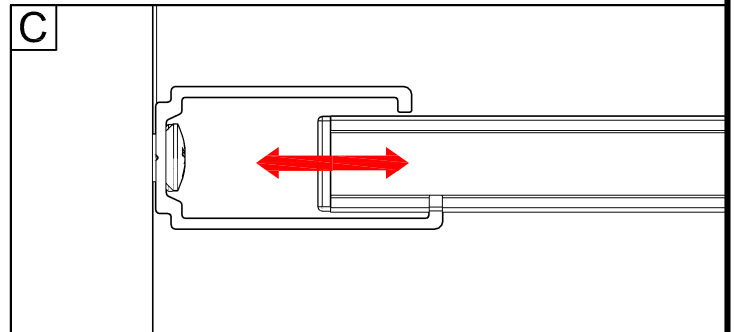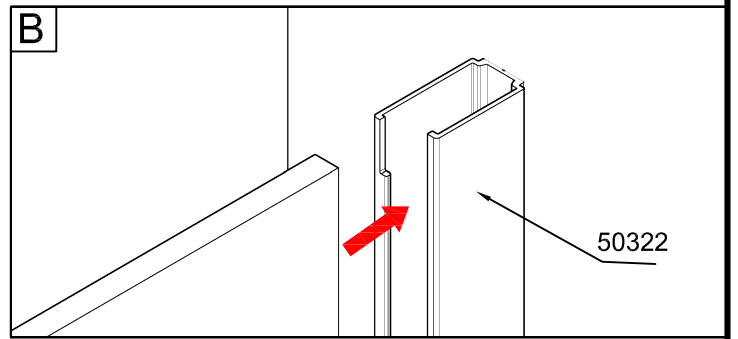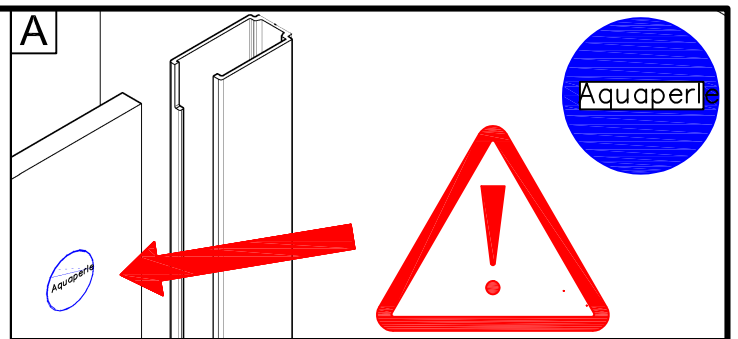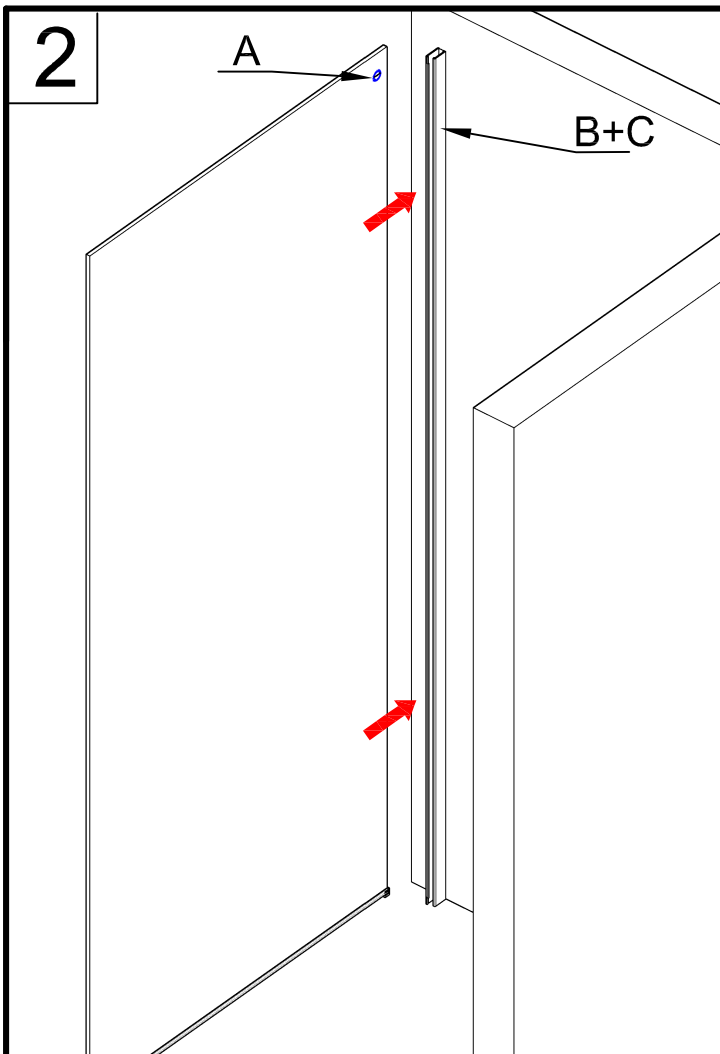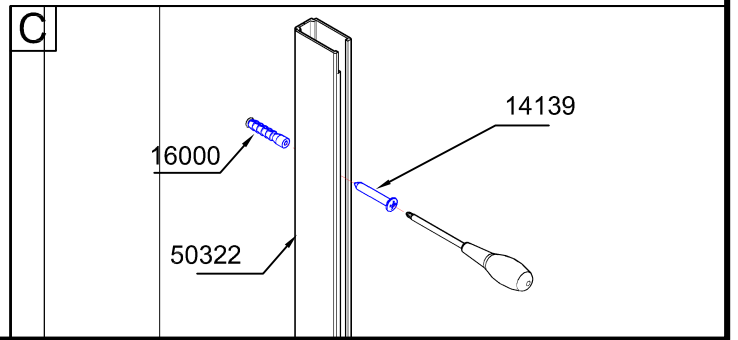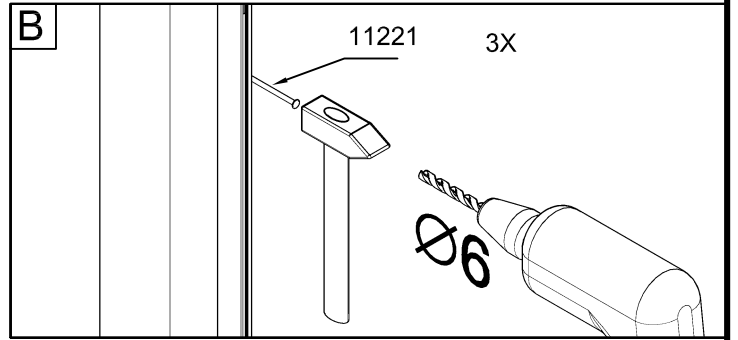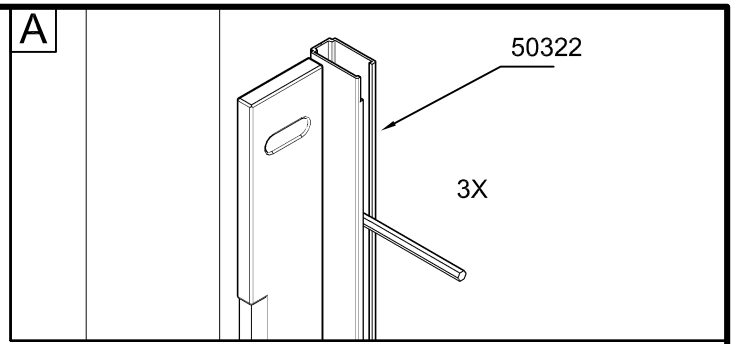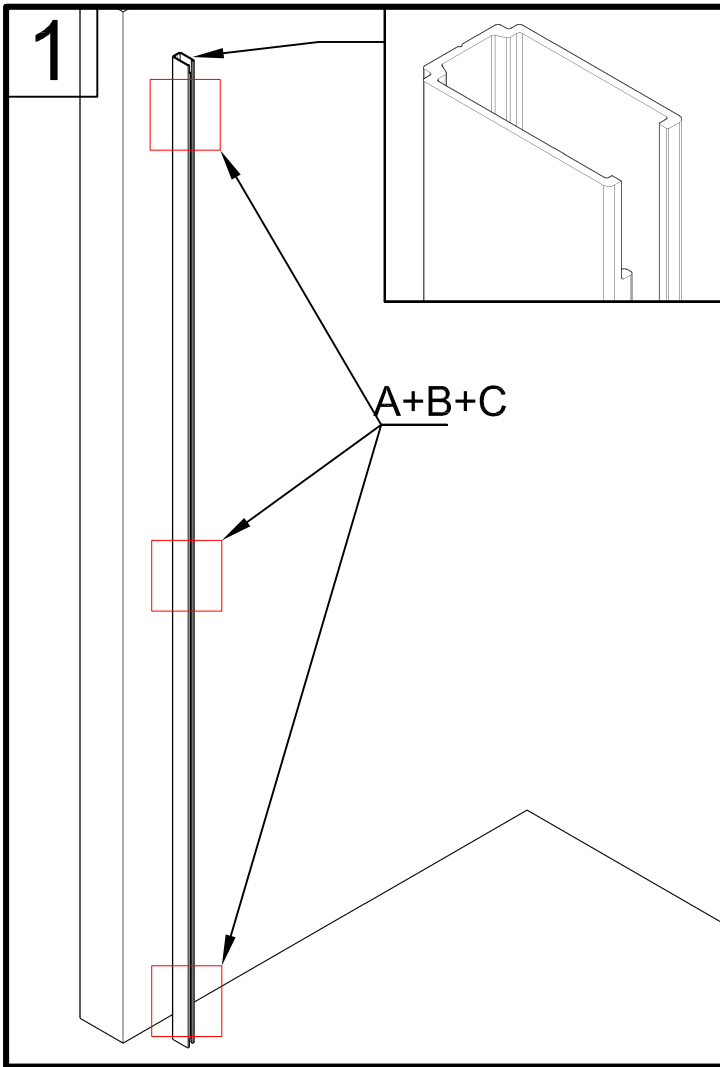

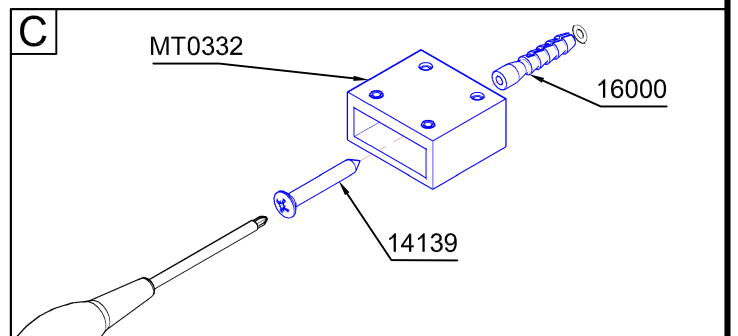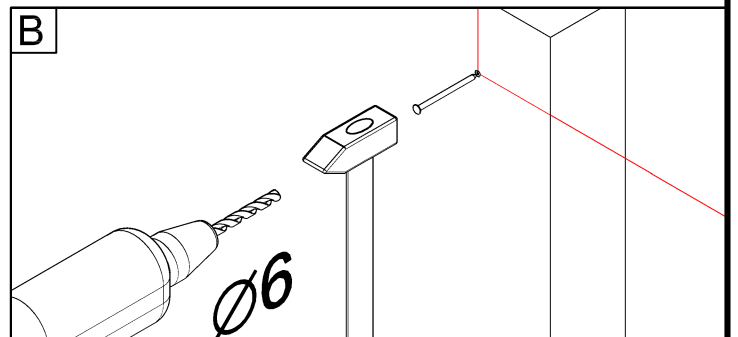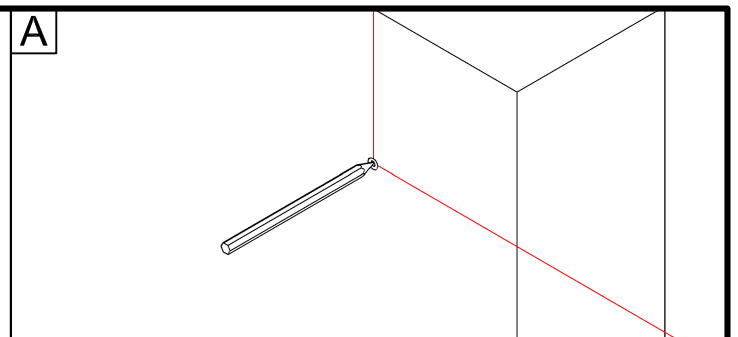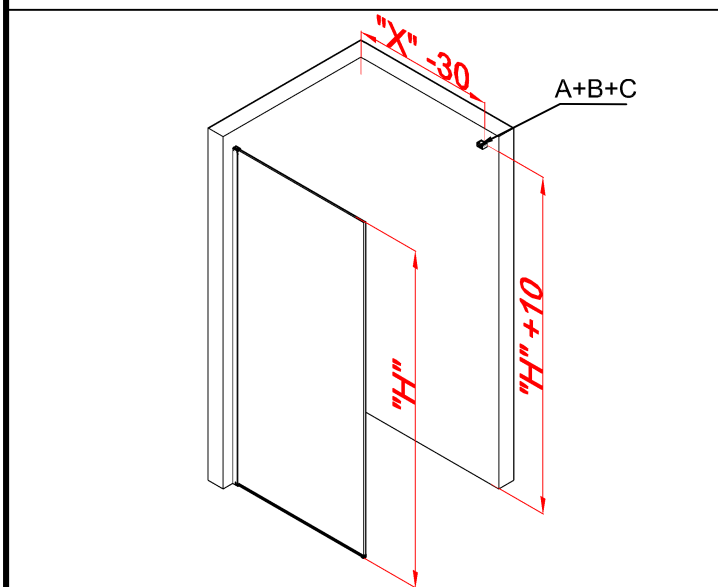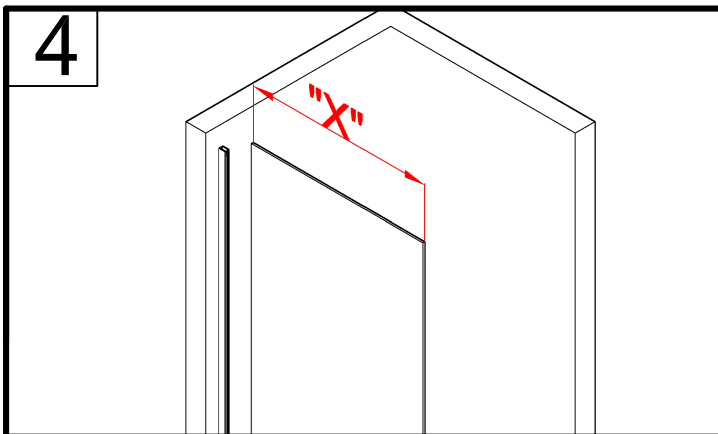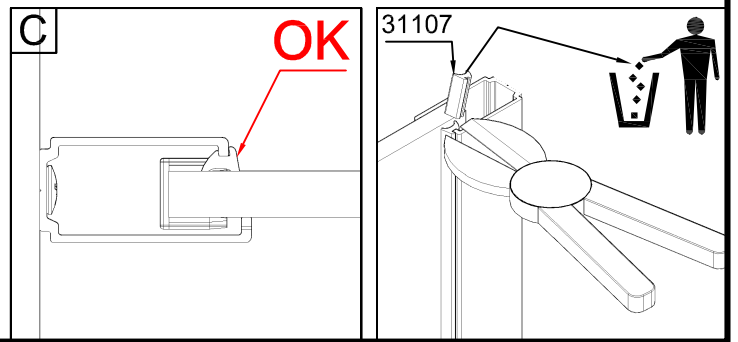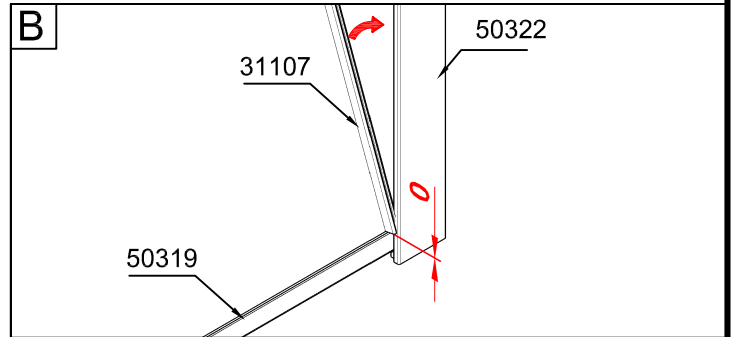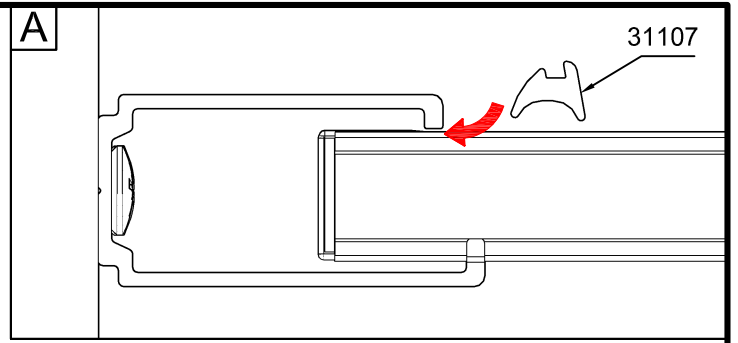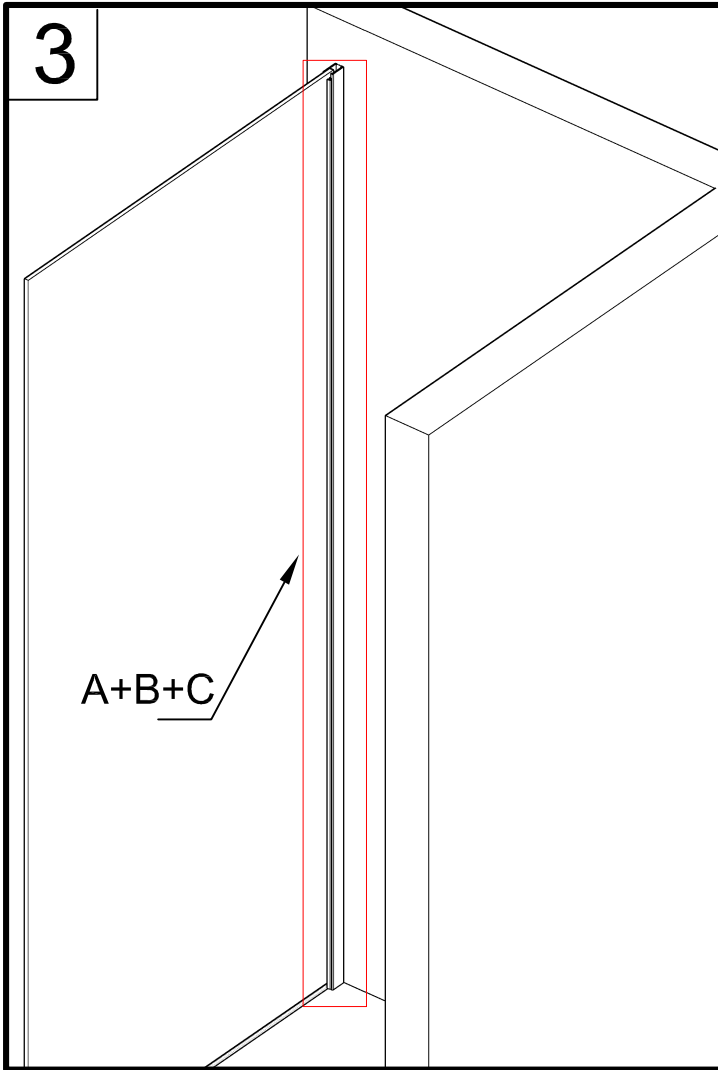

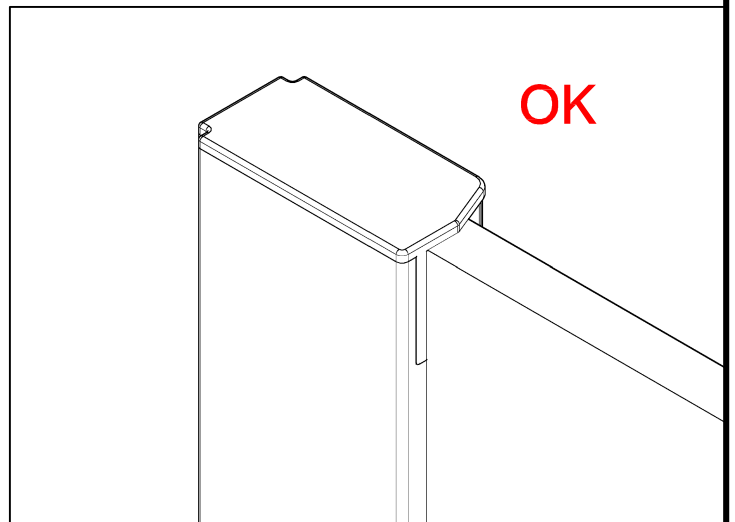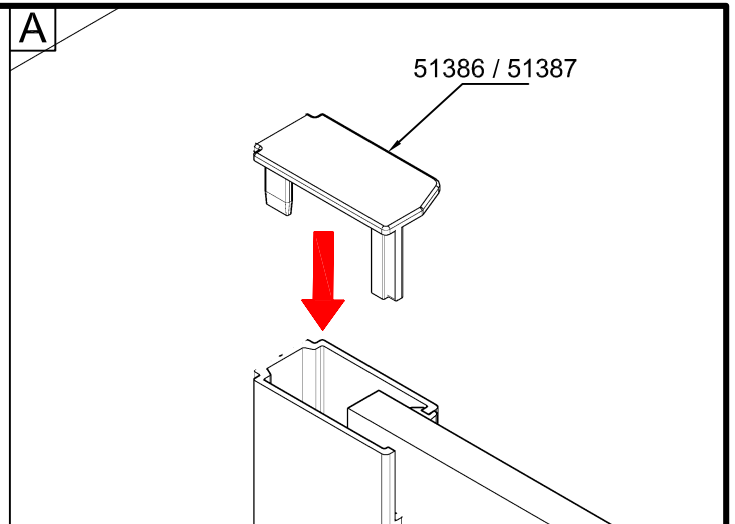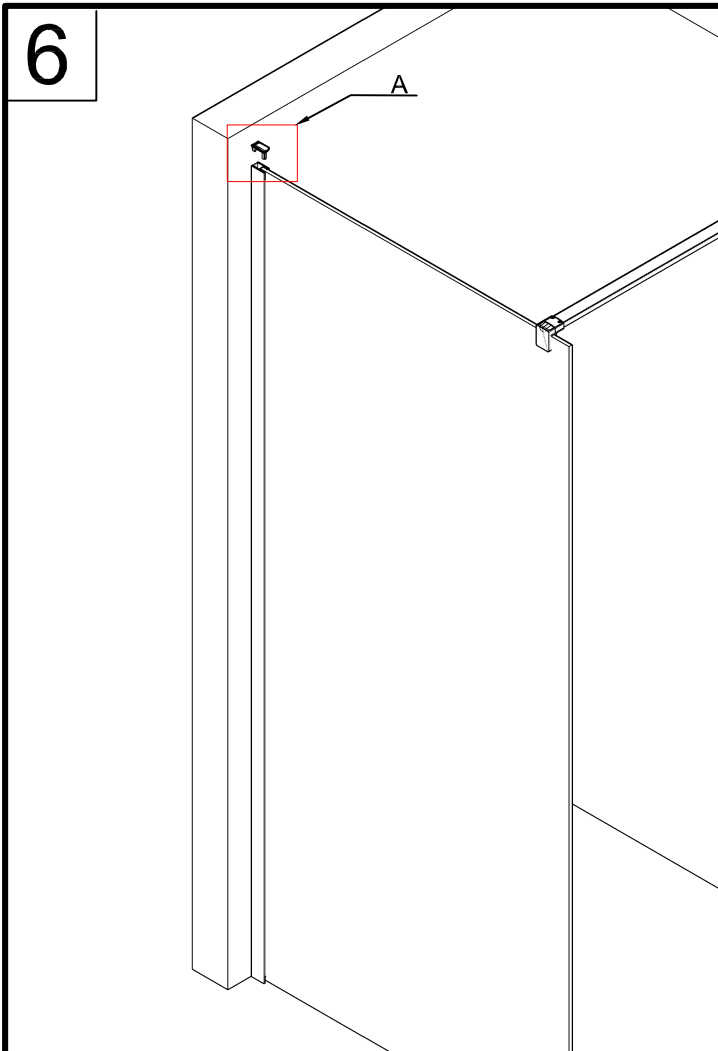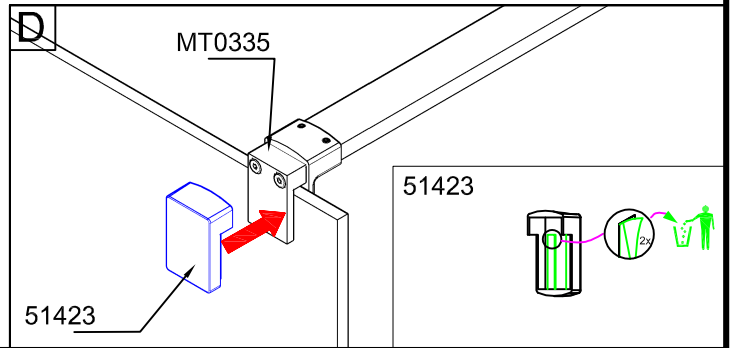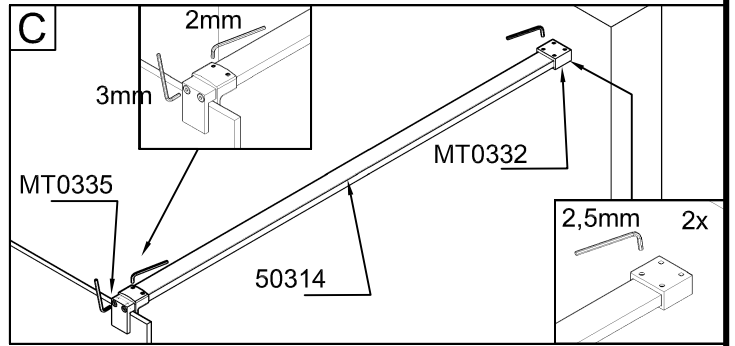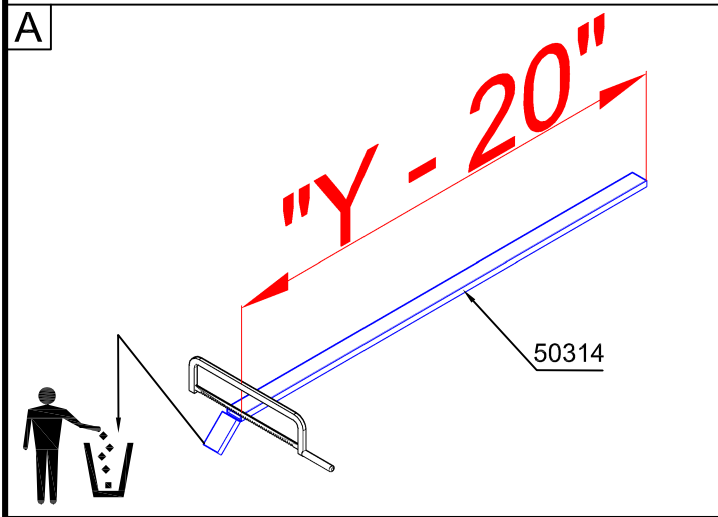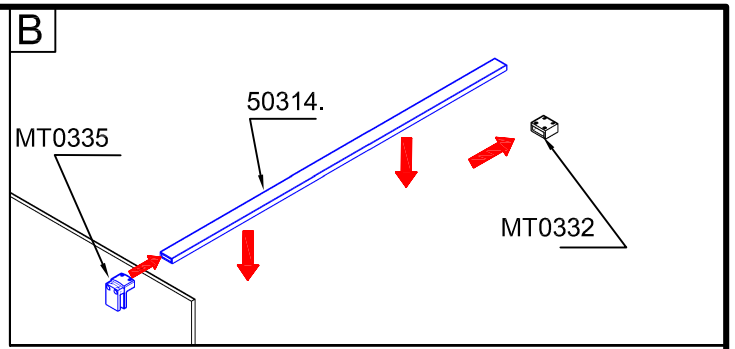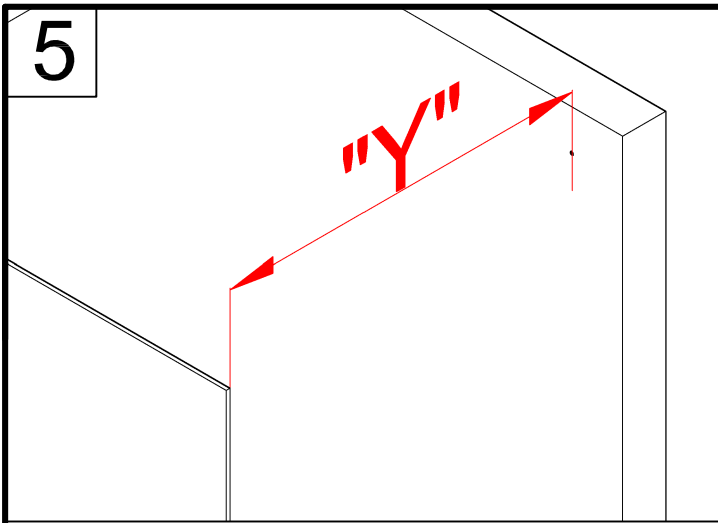


7

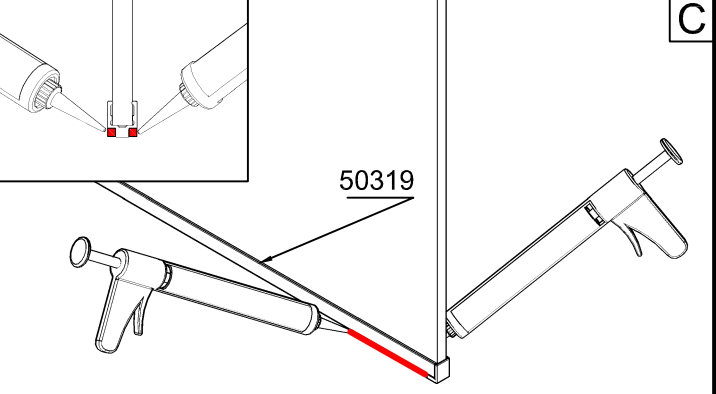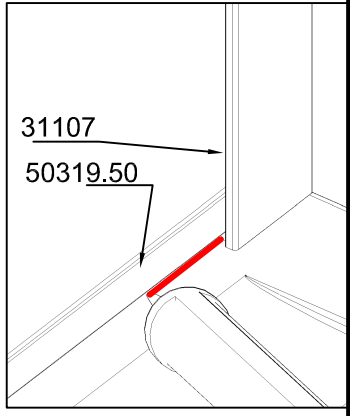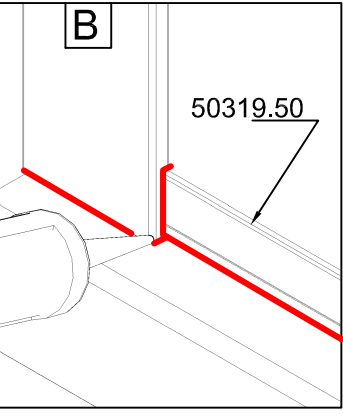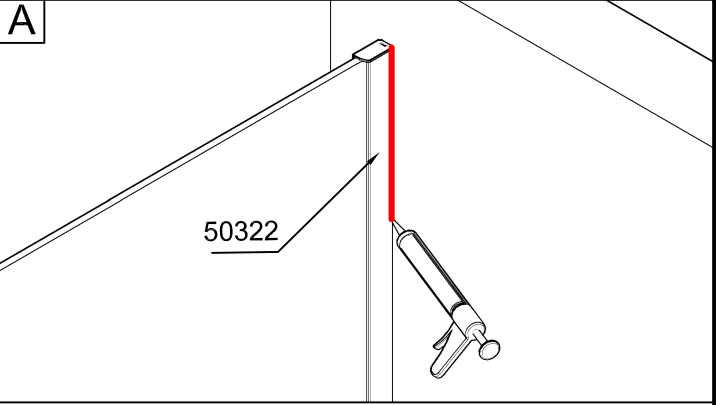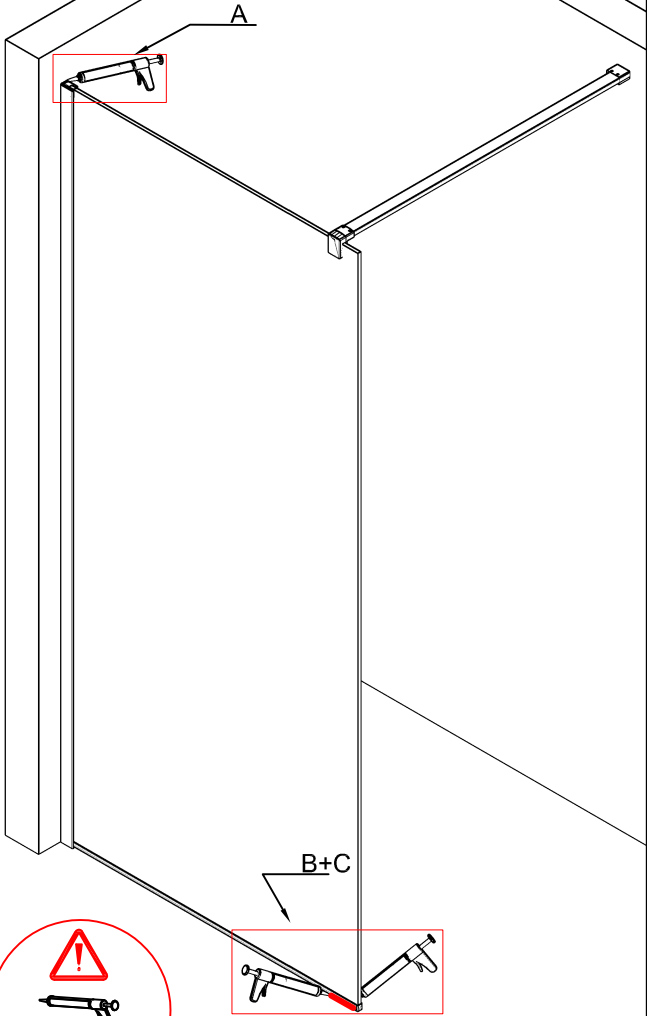

xxxxx.10 Chrome  
 xxxxx.06 Mat Black  
 xxxxx.09 Mat White


MT0332.10  
 MT0332.06  
 MT0332.09

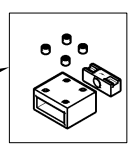

50314.50  
 50314.06  
 50314.09

MT0335.10  
 MT0335.06  
 MT0335.09

51423.10  
 51423.06  
 51423.09

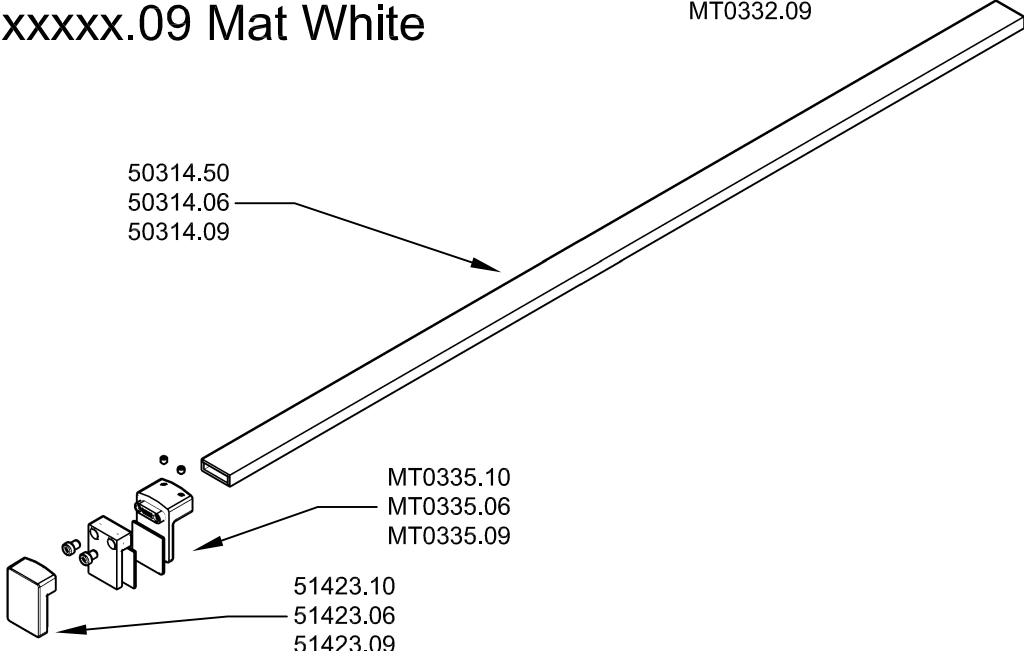

51386.10 / 51386.06 / 51386.09  
51387.10 / 51387.06 / 51387.09

14139

xxxxx.10 Chrome  
xxxxx.06 Mat Black  
xxxxx.09 Mat White

16000

50322.50  
50322.06  
50322.09

31107

51358.10  
51358.06  
51358.09

50319.50  
50319.06  
50319.09

51358.10  
51358.06  
51358.09